VEHICLE DISASSEMBLY

2004-UP TOYOTA SOLARA RADIO REMOVAL

1. Using Phillips screwdriver, remove (2) screws in an upward angle at bottom edge of radio and air conditioning control bezel.
2. Using panel removal tool, pop out radio dash bezel and remove.
3. Using Phillips screwdriver, remove (4) screws from radio and disconnect.

KIT ASSEMBLY

DOUBLE DIN MOUNT

1. Snap the left & right mounting brackets to the wedge locations on the mounting panel.
2. The snap locations are located on the sides of the recessed radio opening of panel.
3. When the brackets are secured to the panel (Illustration B), slide through & align the aftermarket double DIN radio to the mounting holes of the brackets. When placed properly, use supplied screws from aftermarket double DIN radio.
4. Align & mount factory air conditioning module (Illustration A) to the lower position of the mounting kit.
5. Specific holes on the mounting bracket align with the air conditioning module mounting locations. Use factory screws to secure the air conditioning module.

(ILLUSTRATION A)

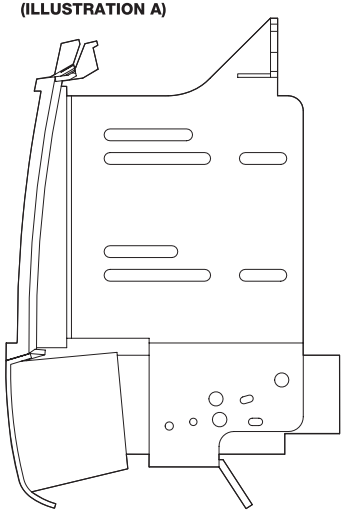

FACTORY AIR CONDITIONING MODULE

(ILLUSTRATION B)

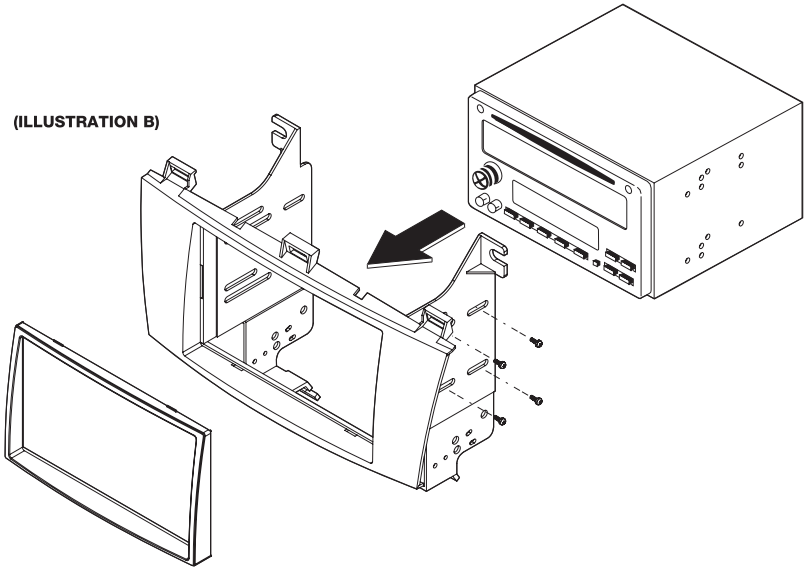

SCOSCHE®

TA2087B

2004-UP TOYOTA SOLARA
DOUBLE DIN KIT

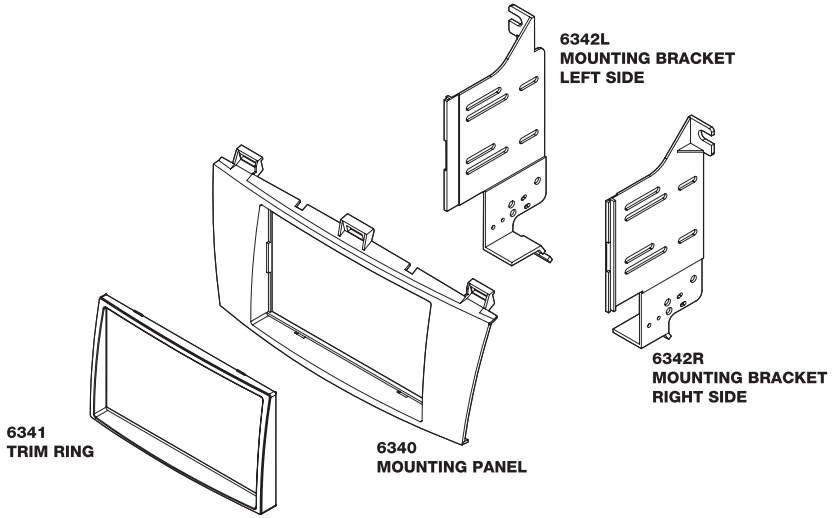

INTRODUCTION

This premium installation kit is for 2004-up Toyota Solara vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION: DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

TA02
1987-Up Toyota

TA07SR
2003-Up Toyota/JBL
Premium Sound Interface

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this TA2087B kit for 2004-Up Toyota Solara Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2007 SCOSCHE INDUSTRIES, INC.

SI 7/07 TA2087 (3000003)